




HP ZBook 15 Optical Drive Replacement

This guide will demonstrate how to remove the optical drive (CD/DVD drive) from the computer.

Written By: Grant Terris

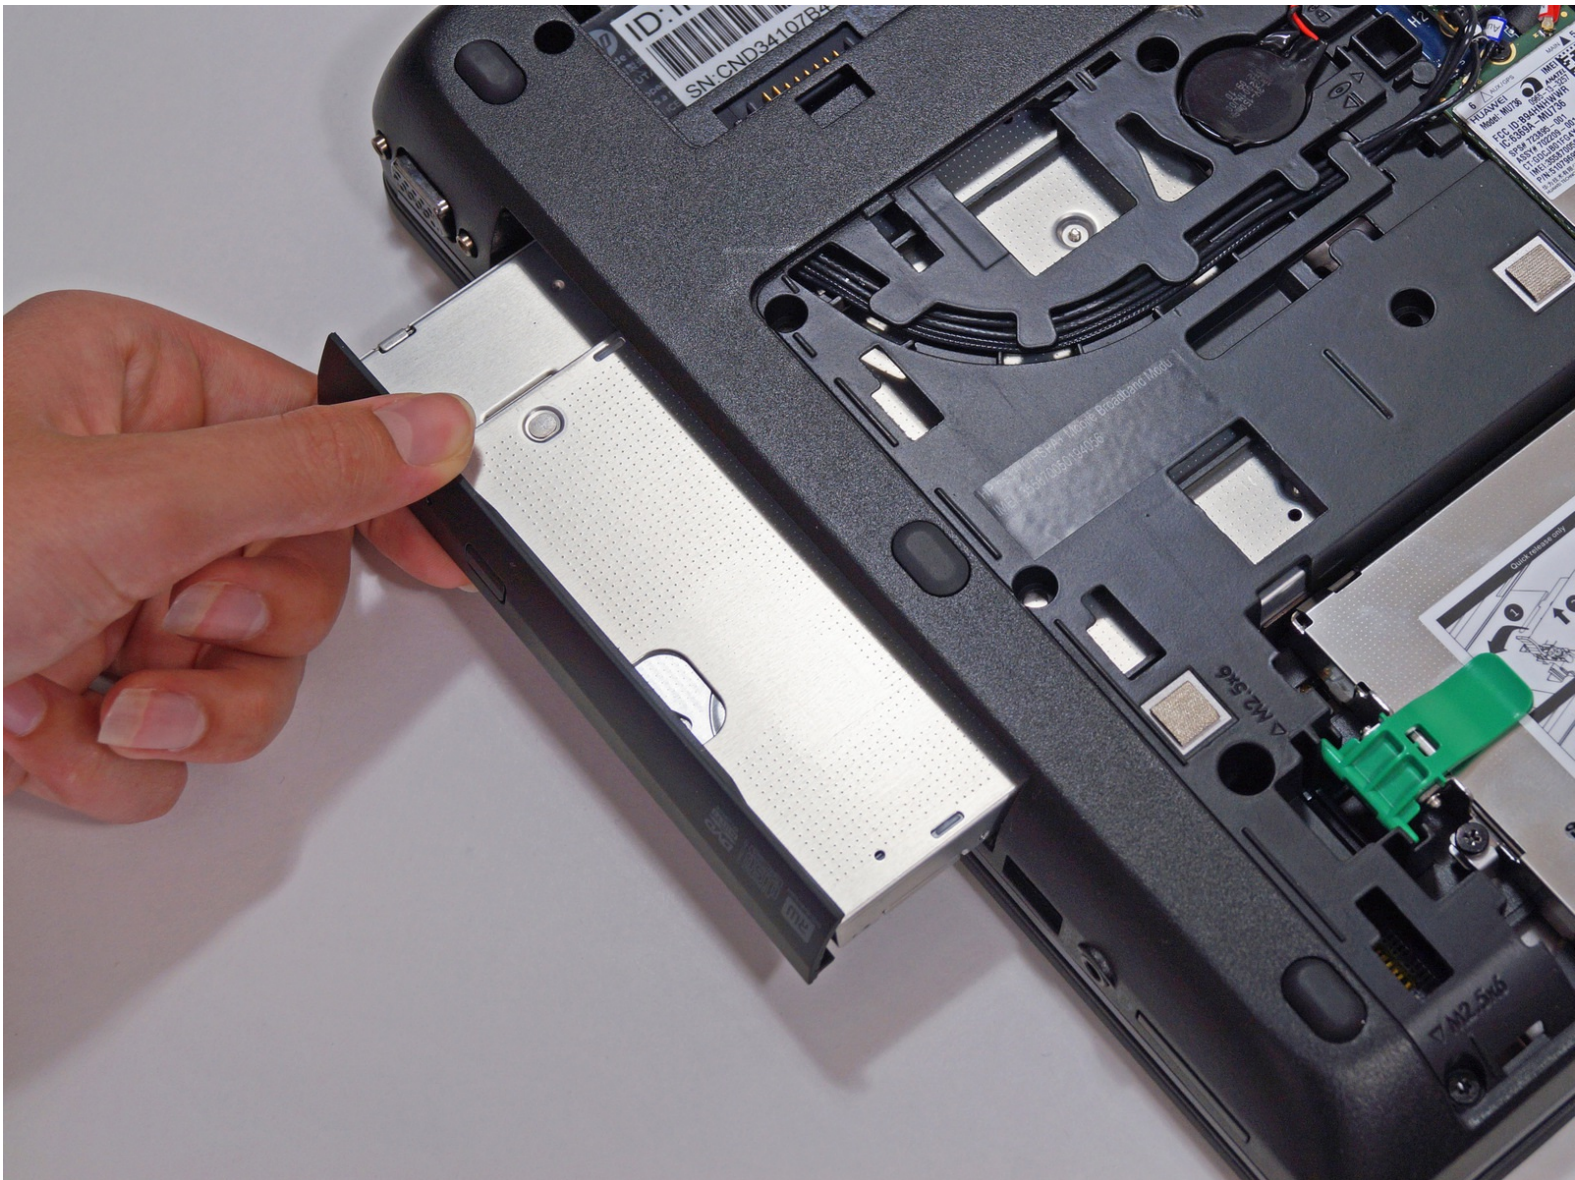

INTRODUCTION

If the CD/DVD drive on your computer is broken and needs replacing, follow this replacement guide!



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery




- Flip the laptop over.
- Slide the lever with the battery symbol beside it firmly until the battery pops out.
- Remove the battery from the laptop.

Step 2 — Back Cover






- Slide the right lever firmly to the right.
- Slide the cover towards yourself to remove it.

Step 3 — Optical Drive

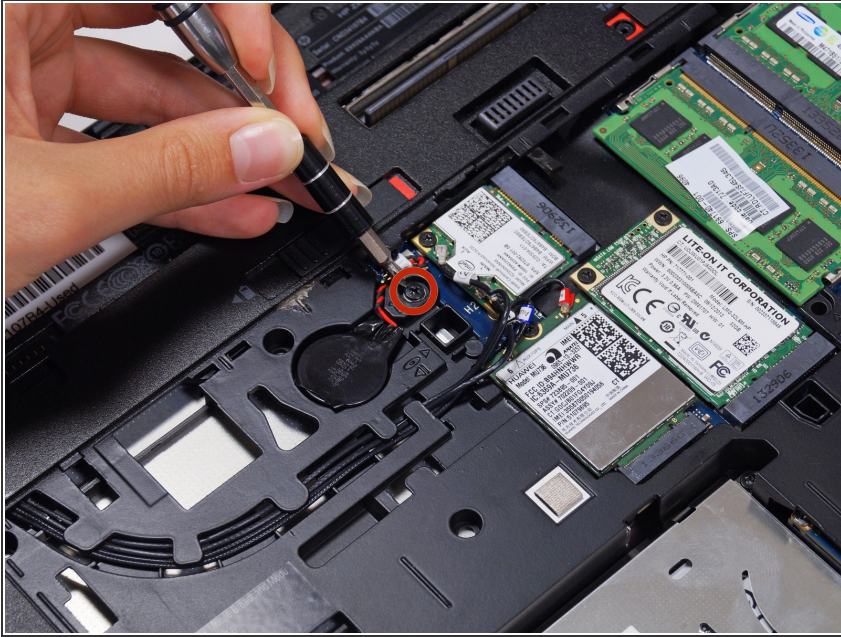

- Unscrew the captive screw shown near the battery compartment with a Phillips #0 screwdriver.
- ⓘ The screw does not come out all the way and stays attached to the computer.

Step 4

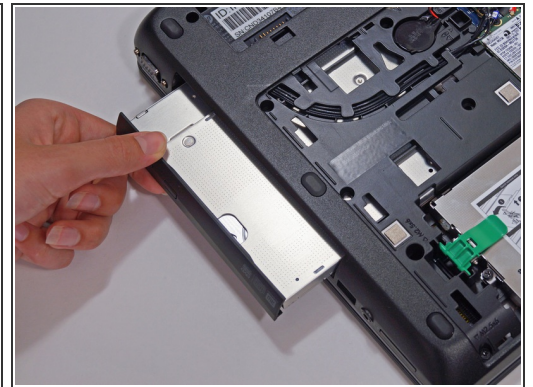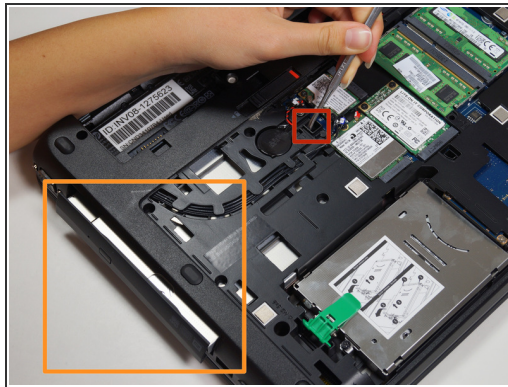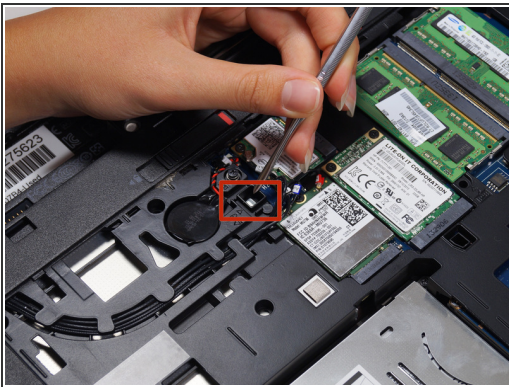

- Push outward on the metal optical drive tab with a metal spudger to unlock the drive from its position in the case.
- Once the drive is protruding from the side of the computer, pull it the rest of the way out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:07:50 AM.